



An example of the *Exclusion Booming Tactic*. Actual deployment should be adjusted for local conditions.

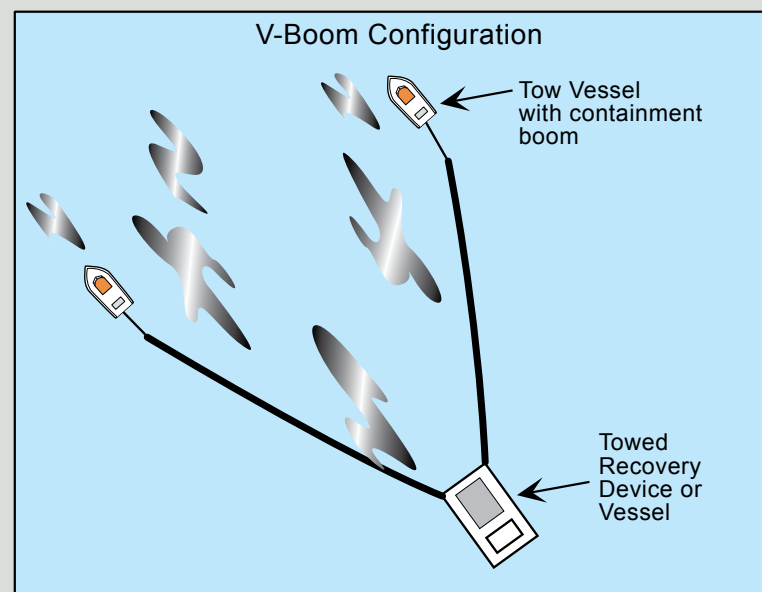

An example of the *Free-oil Recovery Tactic*. Actual deployment should be adjusted for local conditions.

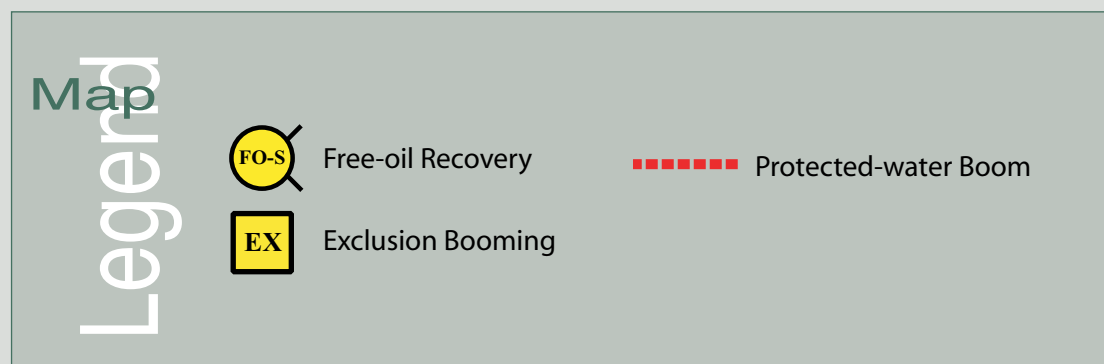


Aerial photography of this area is unavailable at this time, but may be included as it becomes available.

Geographic Response Strategies for Western Alaska Subarea, Island Zone

Koweejoongak River/Vakeekalik Creek Area, WAK-I10

Center of map at 60° 19.68' N Lat., 165° 56.19' W Lon.

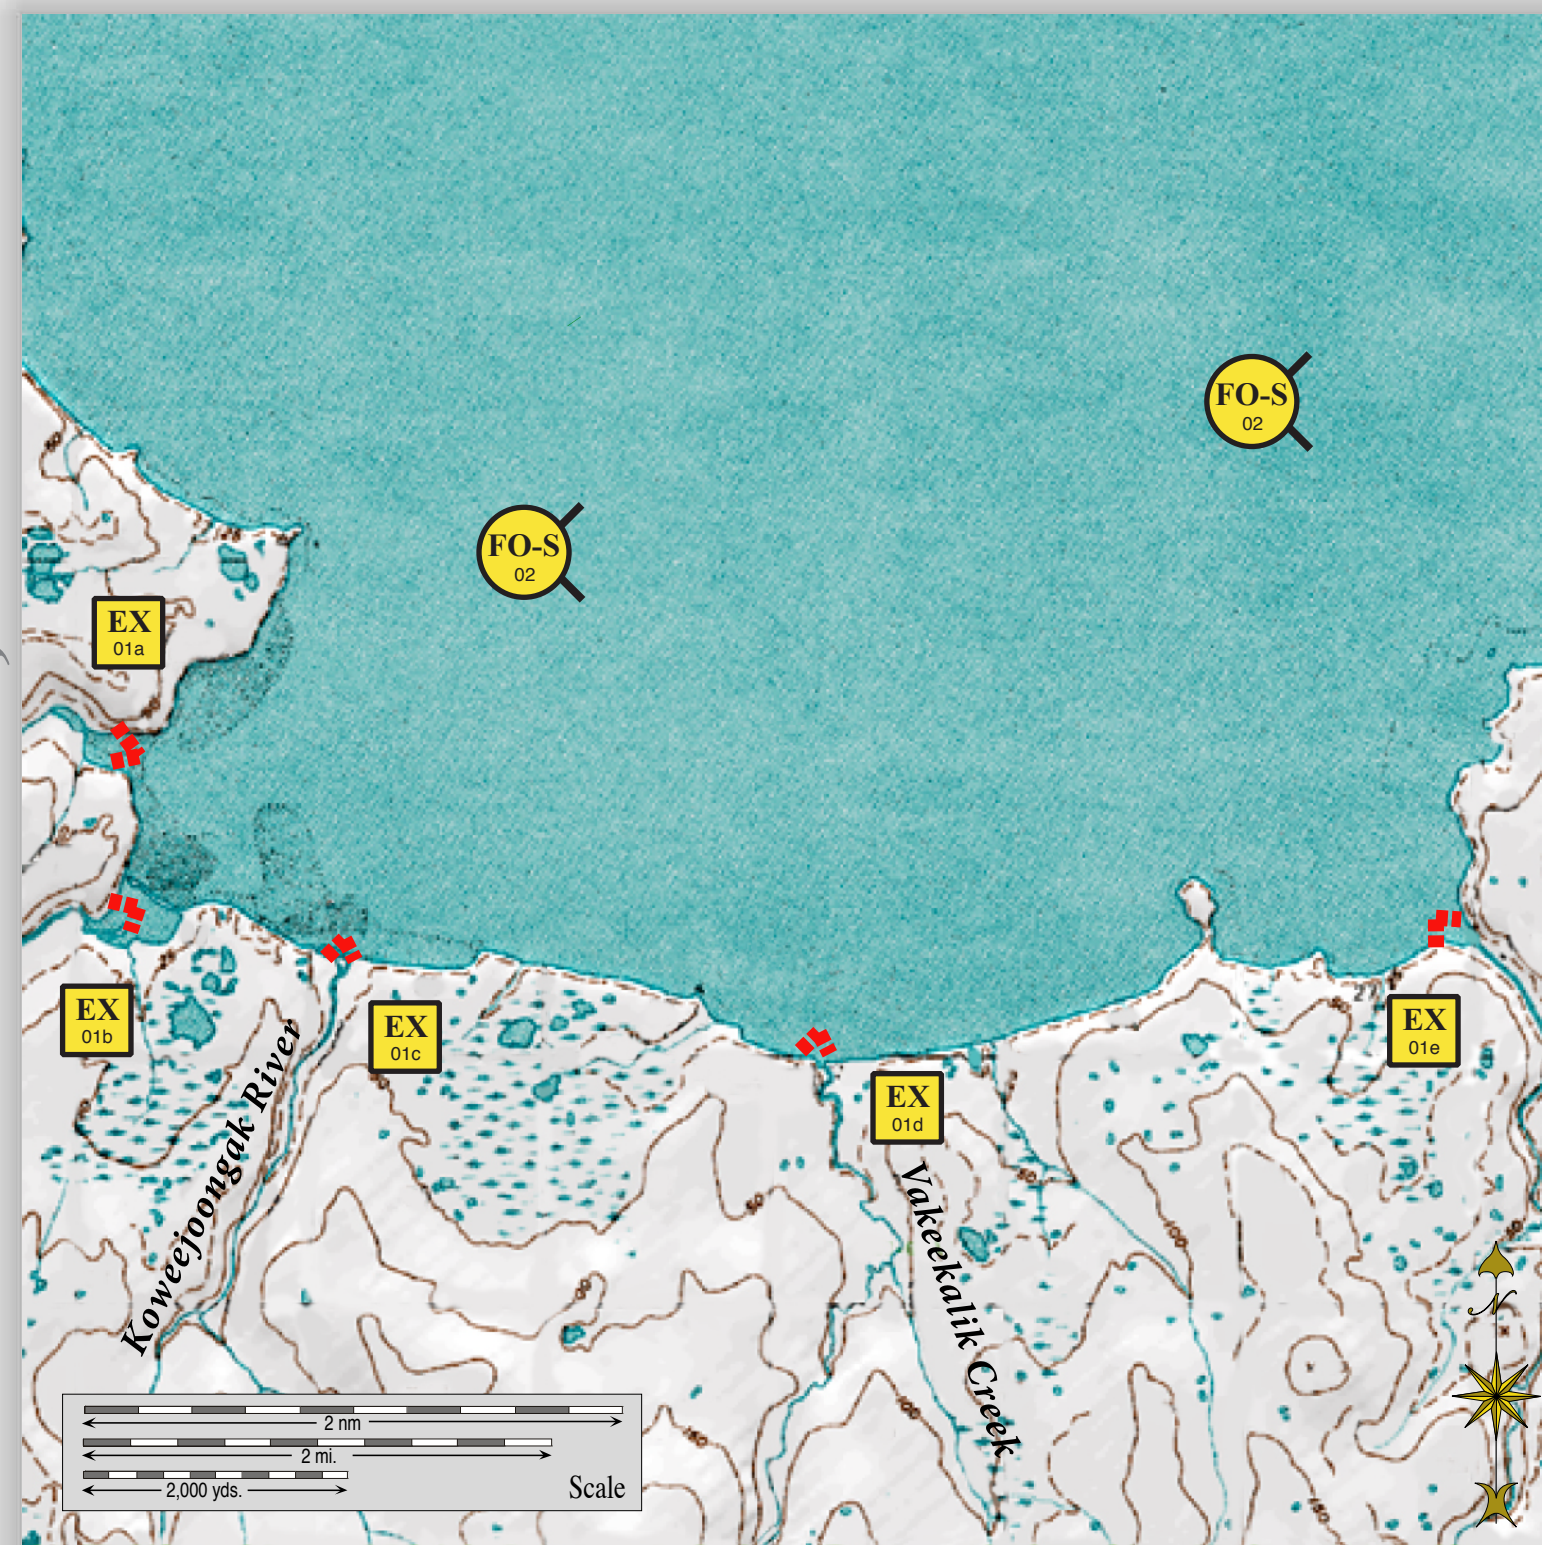

This is not intended for navigational use.

ID	Location and Description	Response Strategy	Implementation	Response Resources	Staging Area	Site Access	Resources Protected (months)	Special Considerations
I-10-01 <div>EX</div>	Koweejoongak River/ Vakeekalik Creek a. Lat. 60° 19.92'N Lon. 166°05.52'W b. Lat. 60° 19.92'N Lon. 166°05.52'W c. Lat. 60° 19.18'N Lon. 166°03.63'W d. Lat. 60° 18.80'N Lon. 166°00.04'W e. Lat. 60° 19.25'N Lon. 166°55.21'W	Exclusion Exclude oil from impacting the streams in Koweejoongak River/ Vakeekalik Creek.	Deploy anchors and boom with skiffs (class 6) at high tide. Place the protected-water boom in a chevron pattern in front of the entrance to each river. Tend throughout the tide. Boom Lengths: a. 600 ft b. 400 ft c. 400 ft d. 200 ft e. 300 ft	Deployment Equipment 1900 ft. protected-water boom 9 ea. anchor systems Vessels 1 ea. class 3 2 ea. class 6 Personnel/Shift 7 ea. vessel crew/general techs Tending Vessels 1 ea. class 3 1 ea. class 6 Personnel/Shift 4 ea. vessel crew/general techs	Vessel Platform	Via marine waters Chart 16006	Fish- intertidal spawning-salmon (June-Sept.),arctic char Birds-waterfowl, seabird and shorebird nesting Habitat- exposed rocky shore, gravel beaches Human use-subsistence	Vessel master should have local knowledge. Title 41 permitting required from ADNRR. Surveyed: not yet Tested: not yet
I-10-02 <div>FO-S</div>	Koweejoongak River/ Vakeekalik Creek Nearshore waters in the general area of: Lat. 60° 19.68'N Lon. 165°56.19'W	Free-oil Recovery Maximize free-oil recovery in the offshore & nearshore environment of Koweejoongak River/ Vakeekalik Creek depending on spill location and trajectory.	Deploy free-oil recovery strike teams upwind and up current of the Koweejoongak River/ Vakeekalik Creek. Use aerial surveillance to locate incoming slicks.	Deploy multiple free-oil recovery strike teams as required to maximize interception of oil before it impacts sensitive areas.	Mekoryuk	Via marine waters Chart 16006	Same as I-10-01	Vessel master should have local knowledge. Use extreme caution, shallow waters with shifting channels and bars.

NOTE: Sensitive resource information can be found on other maps which can be accessed through the sensitive area section of the Western Alaska Subarea Contingency Plan: http://dec.alaska.gov/spar/perp/plans/scp_wak.htm.